


This is our installation guide for our freestanding Luna.





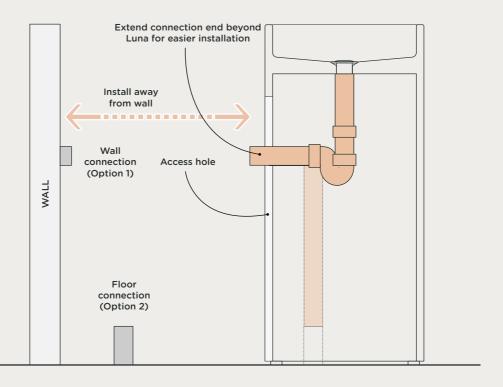


Access holes are provided for both S-Trap and P-Trap configurations. Connect specified trap to basin waste within the cavity. Extend trap connection beyond Luna to allow for easier installation.



Do note the Luna does not sit flush against the wall to allow for hand access.


See also: Step 03.

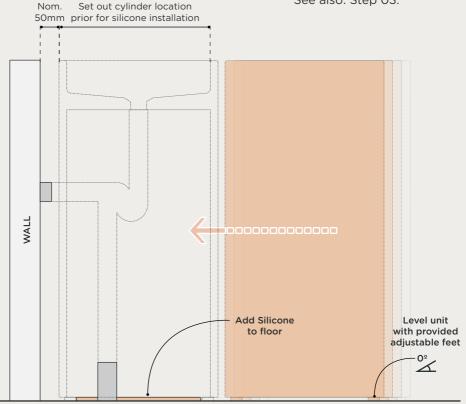



Level cylinder with provided adjustable feet. Add clear Silicone to the floor of the proposed location of Luna's base.

Move Luna into place with two people.

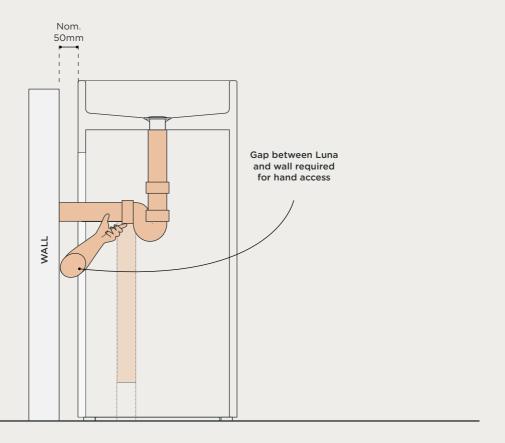



Connect waste to compliant flexible pipe via access hole in back of Luna.

Got a question? Drop us a line, we're here to help!

info@noodco.com.au

noodco.com.au