


This is our installation guide for our freestanding Molli.






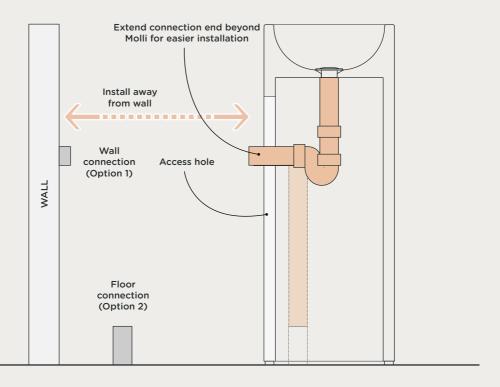

Access holes are provided for both S-Trap and P-Trap configurations. Connect specified trap to basin waste within the cavity. Extend trap connection beyond Molli to allow for easier installation.




Do note the Molli does not sit flush against the wall to allow for hand access.

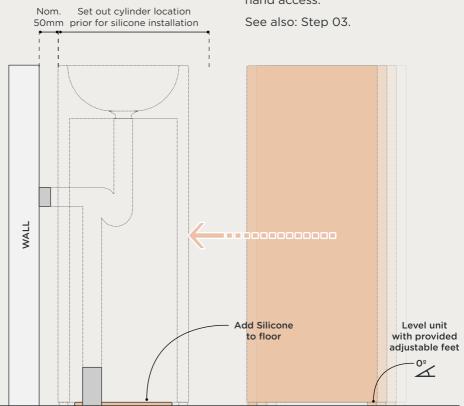



Level cylinder with provided adjustable feet. Add clear Silicone to the floor of the proposed location of Molli's base.

Move Molli into place with two people.

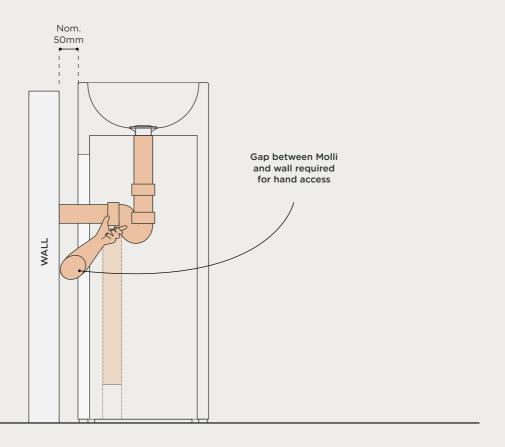



Connect waste to compliant flexible pipe via access hole in back of Molli.

Got a question? Drop us a line, we're here to help!

info@noodco.com.au

noodco.com.au